


**2** Using a cassette lockring tool, turn the lockring counter-clockwise until completely removed.


**1** Hold the cassette in place with cassette pliers or a chain whip tool.

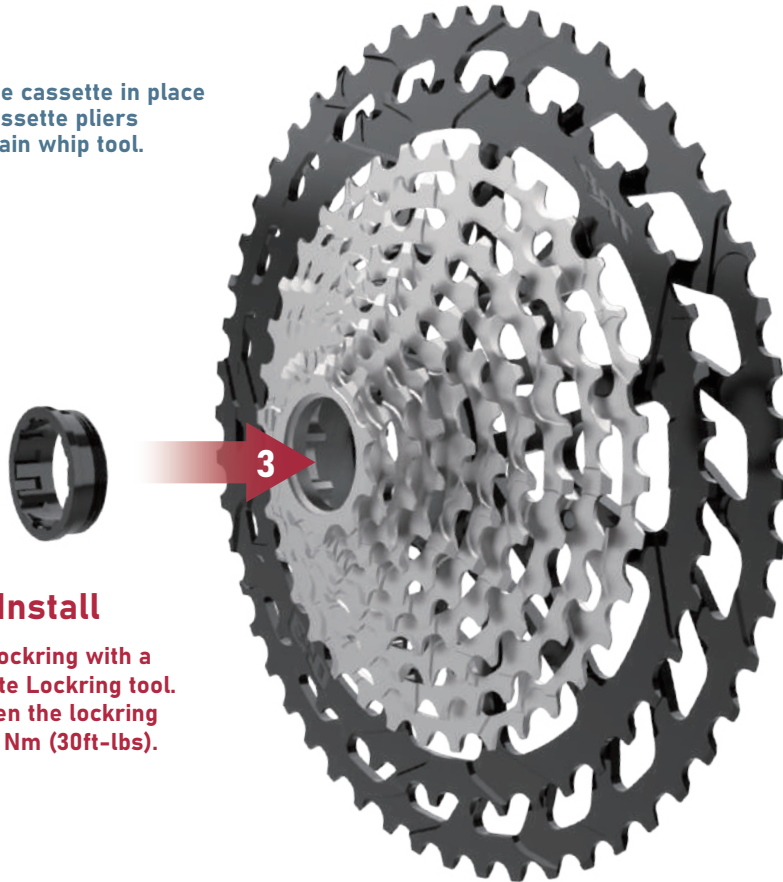


**Install**  
the lockring with a Cassette Lockring tool. Tighten the lockring to 40 Nm (30ft-lbs).

**1** Align the wide groove on the Microspline™ freehub body with the wide spline on the cassette.

**Removal**  
Remove the cassette by pulling the cassette away from the freehub.

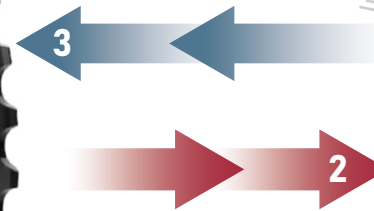

**Installation**  
Install the cassette directly onto the freehub body.

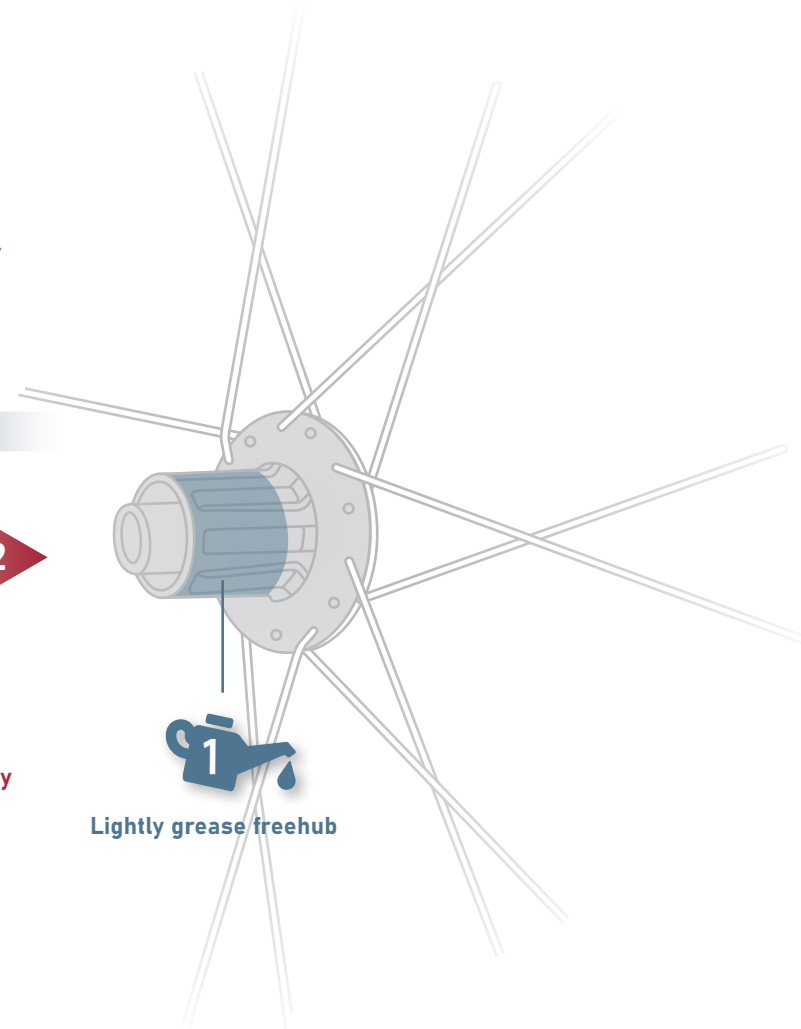

Lightly grease freehub

**!** CS-M9050-12 is only compatible with the Microspline™ freehub.