
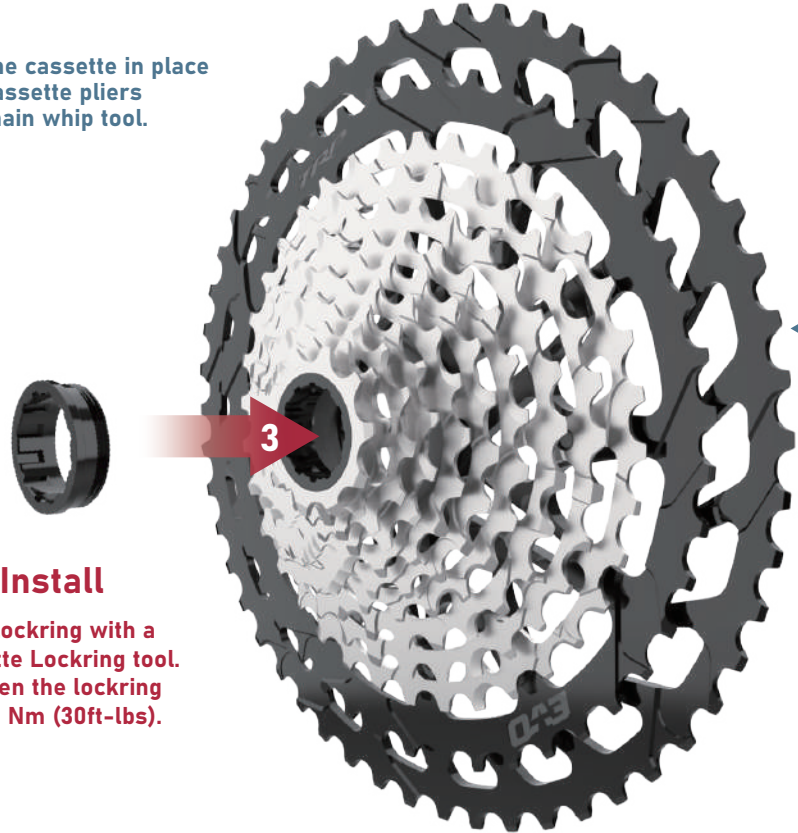




CS-M9050-12 Cassette Installation

2 Using a cassette lockring tool, turn the lockring counter-clockwise until completely removed.


1  Hold the cassette in place with cassette pliers or a chain whip tool.




Install
the lockring with a Cassette Lockring tool. Tighten the lockring to 40 Nm (30ft-lbs).

1 Align the wide groove on the Microspline™ freehub body with the wide spline on the cassette.

Removal
Remove the cassette by pulling the cassette away from the freehub.

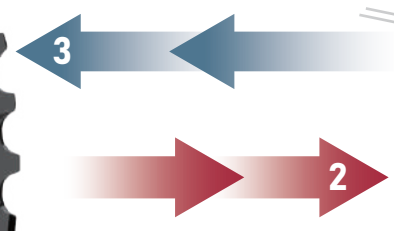

Installation
Install the cassette directly onto the freehub body.

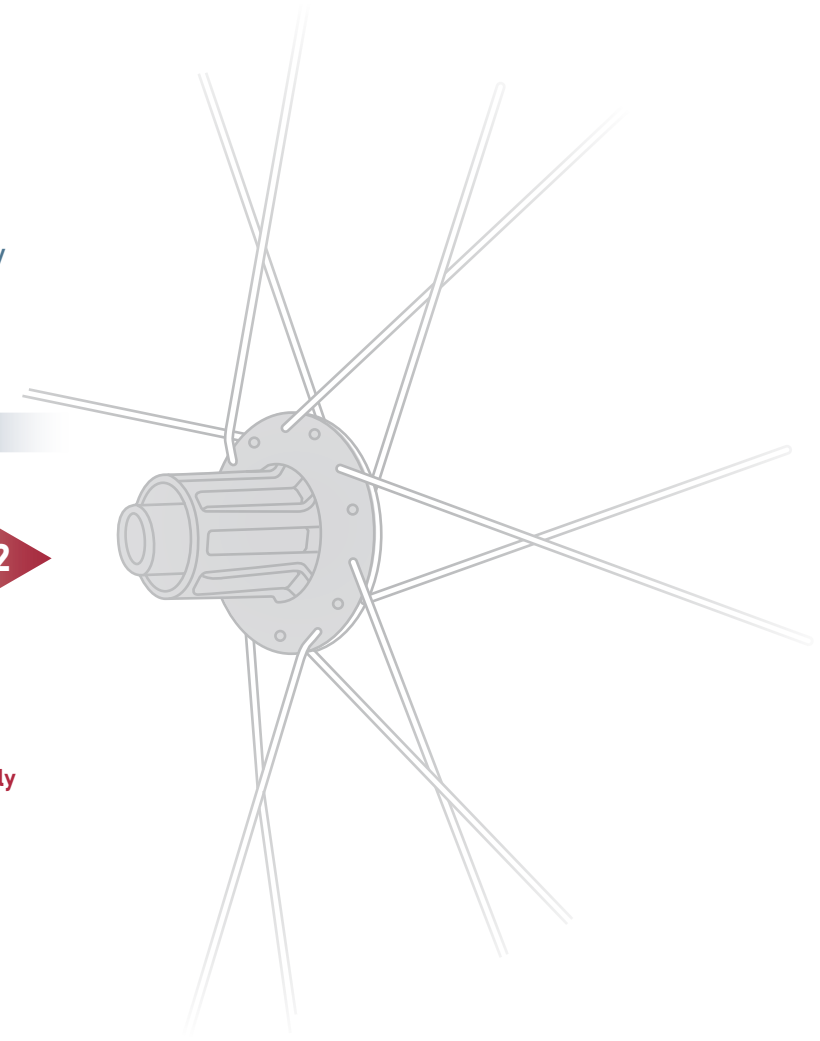

! CS-M9050-12 is only compatible with the Microspline™ freehub.